



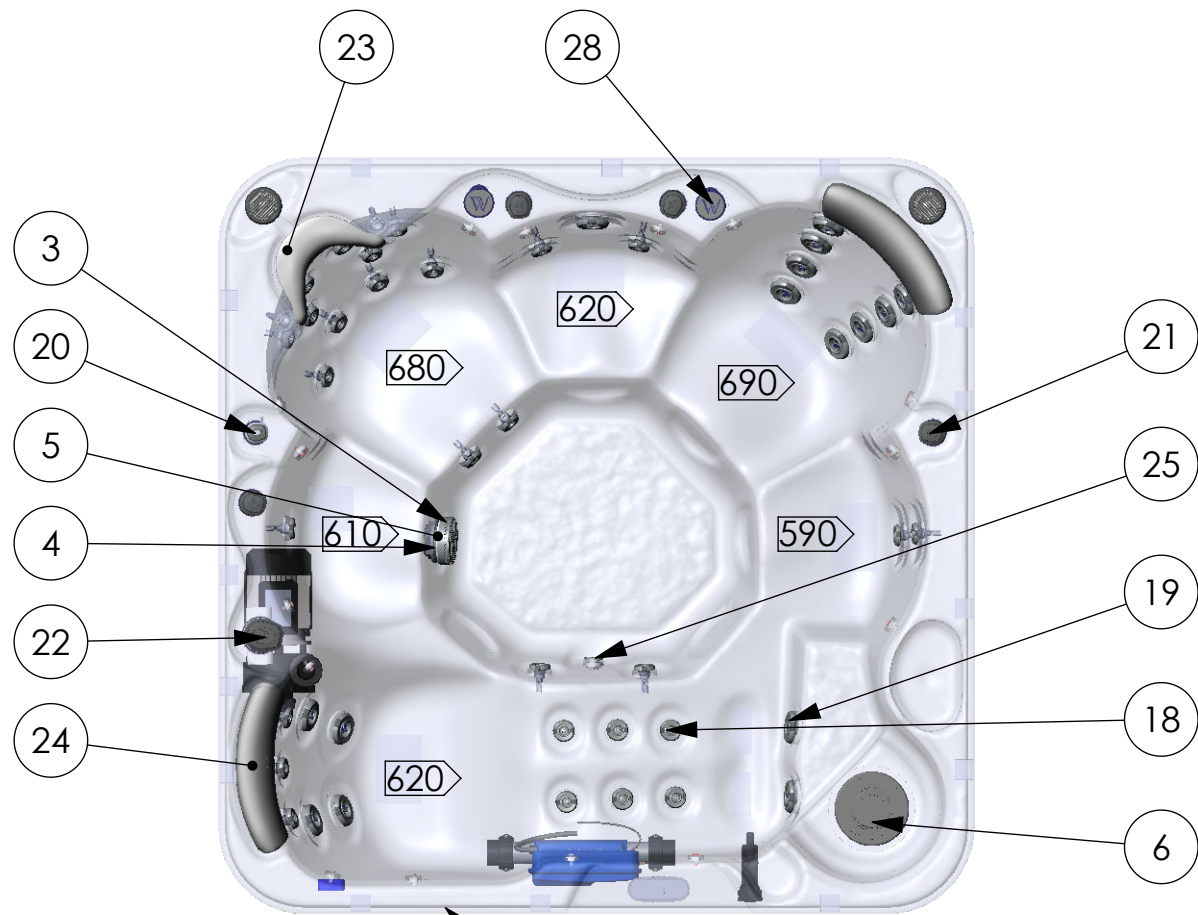


Electrical connection suggested side

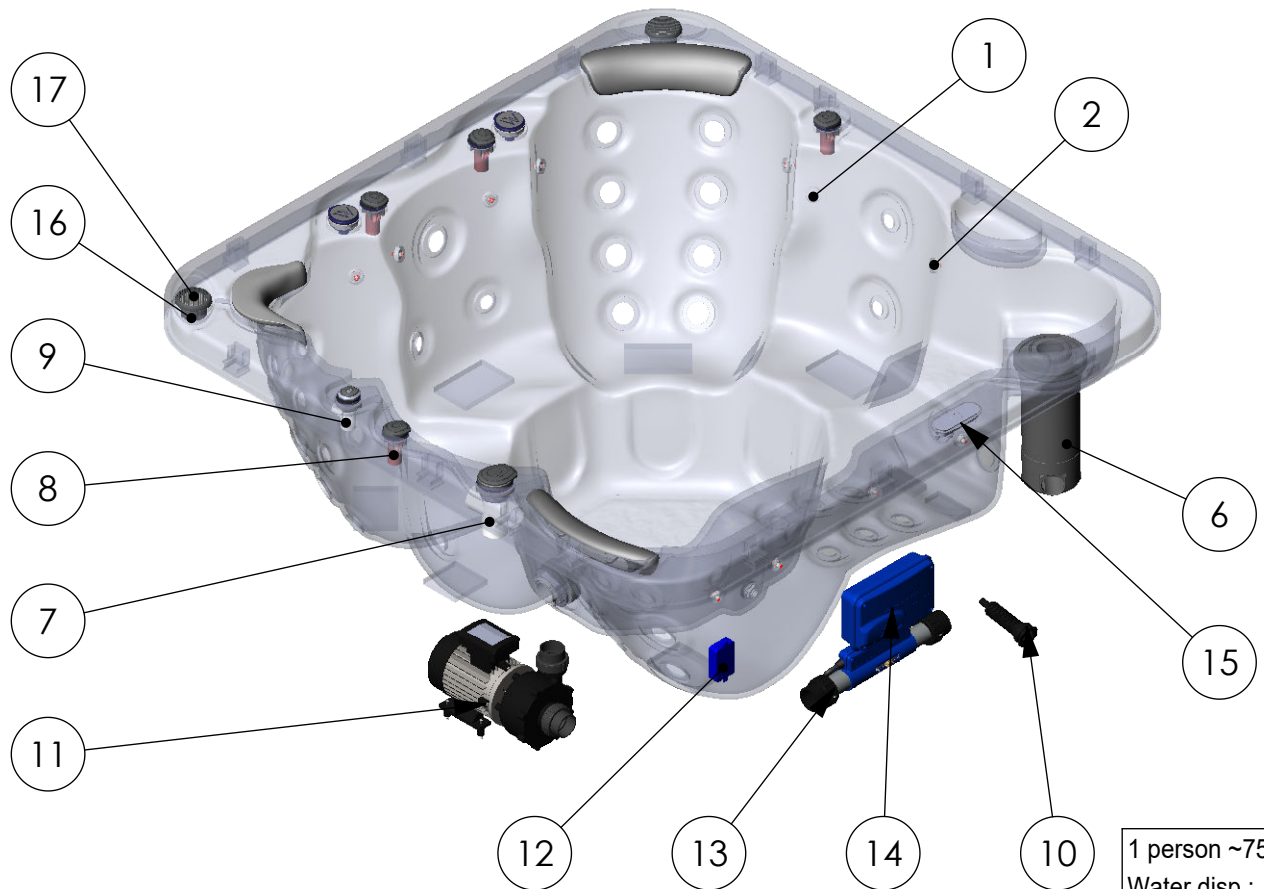


1 person ~75 kg
Water disp.: 450 kg
Minimum water: 1136 liter

No.	Art. No.	IFS megnevezés EN	Pcs
1	AKU2218	Led housing with seal	15
2	AKU2219	Nut for ledhouse	15
3	ABE0505	Suction 2" chrome thick with seal V2	1
4	AJ00244	Sealing for self adjusting suction head nut	1
5	AJ00243	Self adjusting nut for suction head	1
6	AKU0047	Filter House - 60.3 S × 60.3 S - Skimmer	1
7	AKU1891	Water Diverter 60 - LED lighted V2	1
8	AKU1892	Air Regulator - house led lighted V2	4
9	AKU1893	On-Off tap house 33 transparent V2	1
10	AKU0084	Water Drain - 20 RB V2	1
11	ACM0394	Spa Pump 3/0.6 HP - Two Speed	1
12	ACM0999	Ozone - Generator P54 100 mA	1
13	ACM0997	Heater - 3000 W	1
14	ACM0754	Control BOX - IN.YJ-2	1
15	ACM0759	Control Panel IN.K300 - One Pump	1
16	ACM0874	Speaker 3" (2 way)	2
17	ACM0875	Grille for speaker 3" (2 way)	2
18	AJ00214	Jet 2" - transparent 1 Hole transparent V3 Wellis	31
19	AJ00217	Jet 3" - transparent 1 Hole Rotation transparent V3 Wellis	15
20	AKU1896	On-off tap grip Wellis V2	1
21	AKU1895	Air regulator grip Wellis V2	4
22	AKU1894	Water Diverter - Grip Wellis V2	1
23	AF00063	Pillow - 330 × 230 - (Mal) corner, light grey	1
24	AF00040	Pillow - 463 × 135 × 70 - Mal. V2 light grey	2
25	AJ00291	Jet ozone with sealing V2	1
26	AJ00292	Ozone nut sel-aligning V2	1
27	AJ00246	Washer self-aligning	1
28	AKU2437	Cup Holder Light - lens wellis 2020	2
29	AKU2438	Cup Holder Light nut	2

You must install a 30 mA residual-current device (RCD).

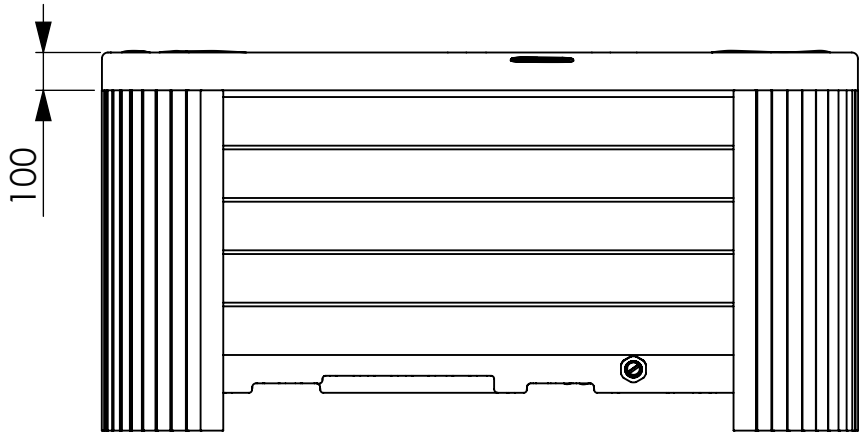

Product family: Wellis\MyLine

 Sheet name: Jupiter spa				Projection 		 Wellis Magyarország Zrt.					
File name: FJ_WM00561_ENG_Jupiter medence											
Dimension SPA: 2000x2000x900 mm			Min.El. nds: 230 V - 1x16A - 50Hz / Opt.El. needs: 230V - 1x25A - 50Hz								
Weight of the SPA: 260 kg		Raklap 2100x950x145 - AE00361		Control box: GECKO YJ2+K300 -3KW (1M)							
Rim height: 100 mm		Approved by: Losteiner Sándor			Pr. No: P-10000 Fe. No: F-		Number: WM00561		D		
Created: 2022. 06. 16.		Drawer: losteiner.sandor - 2022. 06. 16. 14:03:40				A3		M 1:20		page 1 / 2	

INSTALLATION INSTRUCTIONS

Installation, connection and electrical installation can be done only by professionals!

The given dimensions are for information only, they can differ in reality than written on the drawings, due to the manufacturing technology of the pools.

ATTENTION!

Pools are installed only when electric schock protection compliance of the installed residual-current device is stated by the installation personnel in written form.

COMMISSIONING INSTRUCTIONS

1. Preparation of the area

a. Interior/Basement

In case of placing the pool inside a building take in consideration the following requirements: The base must have a proper drain channel to prevent water collecting around the pool.

If building a new place for the pool, it is strongly recommended to install a floor drain to prevent damage due to water overflow or mechanical failure, etc.

If no floor drain is installed, our Company takes no responsibility for occuring damages.

Inside the room, where the pool is installed, humidity can highly increase. To prevent precipitating water and occurance of fungus, proper ventillation of the room is highly recommended.

It is recommended to install a dehumidifier device in the room.

b. Outdoor/Closed terrace

For proper installation of the pool, a **solid, horizontal** base is essential. Make sure that the pool is properly supported.


You must know the load capacity of the base.

Consult a specialst in architecture or a static engineer.

You can find the weight, contents and parts of the pool on the data table.

This weight should not exceed the calculated static capacity, otherwise damage can occur on the pool or base.

If the pool is installed outdoor, it is recommended to build a horizontal, reinforced concrete base with min. 10-15 cm thickness.

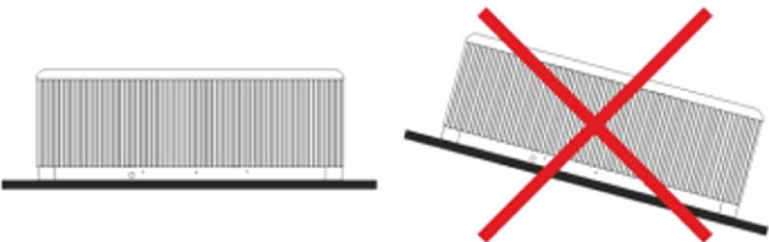

It is appropriate to make the drain channel in the base on the drain side of the pool. Its purpose is to take away splash water around the pool, or drain the released water.

It is also necessary to provide water drainage in the manhole.

The manhole should also ventillate properly. It is recommended to install an exhaust fan or other ventillation device.

Do not expose the empty pool to direct sunlight without adequate protection (pool cover). The long lasting sunlight can damage the surface of the pool or other accessories.

The acrylic surface quickly absorbs the heat from sunlight. Due to high surface temperature, the pool may be damaged.

In case the pool is installed between glass walls, prevent sunlight directly reaching the pool through the glass. Otherwise temperature can get very high.

2. Installation of the pool

When the pool is built-in (lowered into the ground), it is necessary to build a min. 60 cm wide manhole around the pool, to provide space for maintenance works.

When lowering the pool, **the acrylic side must be above the ground**. When not fulfilling these conditions, installation may fail!

The incurring cost of a possible lfting operation is borne by the customer!

3. Electrical installation

You must install a circut breaker dedicated only for the pool, no other devices allowed to connect.

Cable length/cross-section specifications:

- Minimal demand: Until **10 m cable length: 1x16 A, 3x2.5 mm2 cabling (230V)** - in this case the 3 HP motor and the heating CAN'T work simultaneously.
- Total demand: Until **10 m cable length: 1x25 A, 3x4 mm2 cabling (230V)** - in this case the 3 HP motor and the heating CAN work simultaneously.
- If more than 10 m of cable is needed, consult a specialist.

- Installing the cables is recommended through the bottom cover (tray) by drilling a hole and using a cable gland. Recommended direction is shown on the drawing. Min. cable length for installation is 3 m.

- The exact way of electrical installation is always unique, highly dependant on the location and environment of the pool.

Additional electrical installation (cable, circuit breaker and residual-current device) is the customer's responsibility.

These parts are not included in the pool packaging, need to be purchased separately.

Every pool has a dedicated installation drawing.

Make sure that the pool is connected to a 30 mA residual-current device.

Use copper wiring only.

If a fuse fails, replace it only with same type of fuse with same technical parameters.

The device must be connected to the house's Equipotential Bonding Grid.

1 person ~75 kg	
Water disp.: 450 kg	
Minimum water: 1136 liter	

Sheet name: INFO		Product family: Wellis\MyLine	
File name: FJ_WM00561_ENG_Jupiter medence		Projection	
Dimension SPA: 2000x2000x900 mm		Min.El. nds: 230 V - 1x16A - 50Hz / Opt.El. needs: 230V - 1x25A - 50Hz	
Weight of the SPA: 260 kg	Raklap 2100x950x145 - AE00361	Control box: GECKO YJ2+K300 -3KW (1M)	
Rim height: 100 mm	Approved by: Losteiner Sándor	Pr. No: P-10000 Fe. No: F-0000485	Number: WM00561
Created: 2022. 06. 16.	Drawer: losteiner.sandor - 2022. 06. 16. 14:03:40	A3	M 1:15
		page 2 / 2	